


ATF022A USER MANUAL

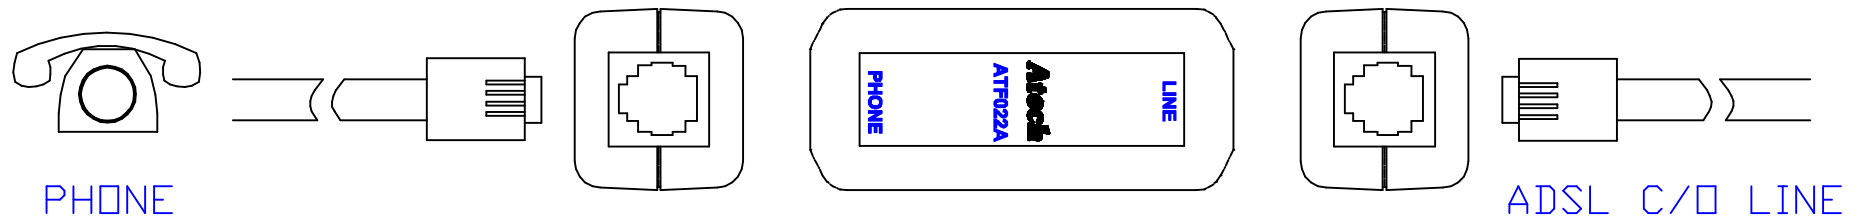

INSTALLATION :

1. CONNECT THE PLUG OF PHONE (RJ-11)
TO THE PHONE SIDE OF ATF022A
2. CONNECT THE PLUG OF ADSL C/D LINE (RJ-11)
TO THE LINE SIDE OF ATF022A

ELECTRICAL CHARACTERISTICS :

<FOR BROADBAND LINE FILTER>

1. DCR : EACH LINE = 2.8 OHM MAX.
2. CMRR (@30KHZ-5MHZ) : -20dB MAX.
3. HI-POT (500VAC,1mA,1SEC) : PRI-SEC