


ATF022B USER MANUAL

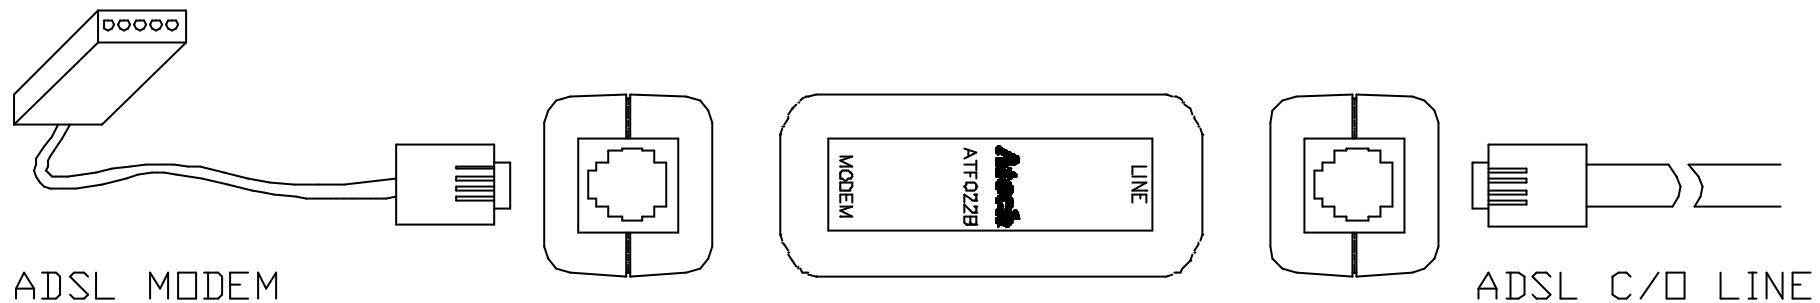

INSTALLATION :

1. CONNECT THE PLUG OF MODEM (RJ-11)
TO THE MODEM SIDE OF ATF022B
2. CONNECT THE PLUG OF ADSL C/O LINE (RJ-11)
TO THE LINE SIDE OF ATF022B

ELECTRICAL CHARACTERISTICS :

(FOR BROADBAND LINE FILTER)

1. DCR : EACH LINE = 2.8 OHM MAX.
2. CMRR (@30KHZ-5MHZ) : -20dB MAX.
3. HI-POT (500VAC,1mA,1SEC) : PRI-SEC
4. DC LOOP CURRENT : 160mA MAX.