

# Corinex Power Net tool user guide - Linux / MAC OSX

PowerNet setup tool (**cpntool**) serves to setup parameters of Corinex PowerNet adapters. This document describes version 0.3 of cpntool.

## 1. Installation:

### From prepared rpm package:

Open shell and cd to directory where cpntool rpm package resist. Type command **rpm -ivh cpntool-0.3-3mdk.rpm** in your shell as root.

### From tgz archive:

Copy tgz package where you want to install and cd in this directory. Type command **tar xfz cpntool-0.3.bin.tgz**.

## 2. Usage:

Run cpntool without parameters to get help on command line options. Only superuser **can use** utility, use command **su** in terminal before running utility if you are not logged in as superuser.

### Changing network password:

From shell run cpmttool with arguments:  
**cpntool -setpwd**  
Utility will ask for password (must have length between 6 and 24 characters) Enter password required for your PowerNet network. All process is displayed on Fig.1.

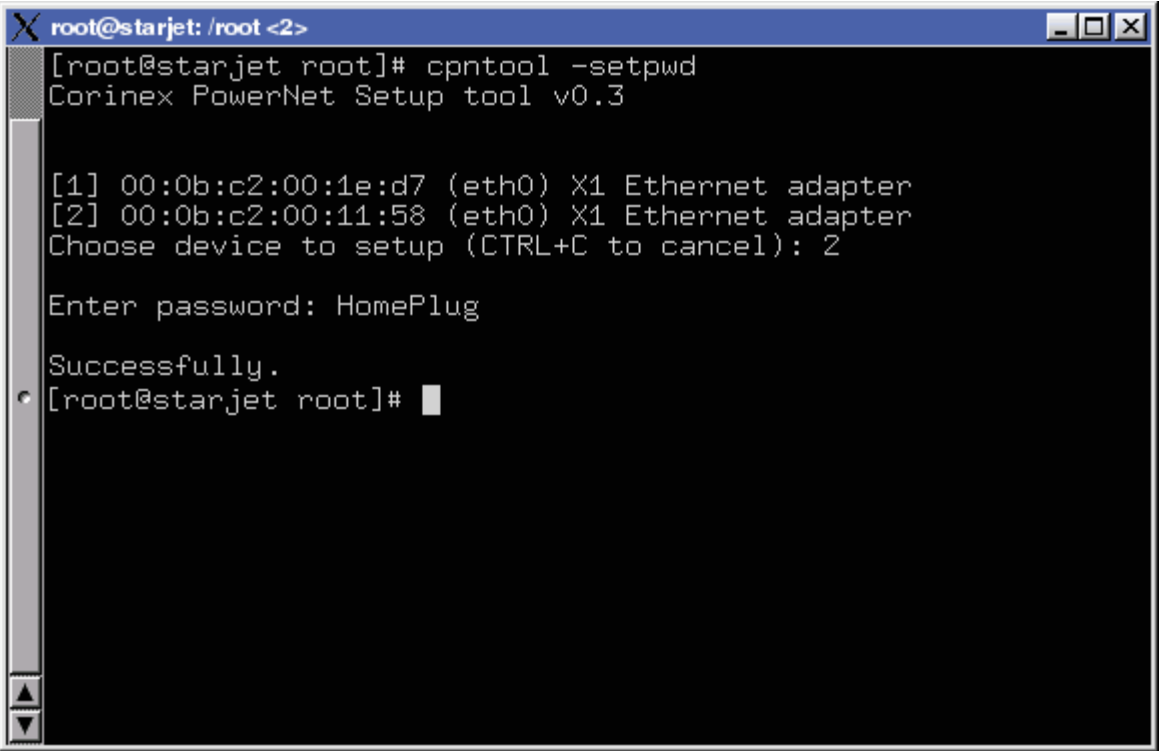


Fig.1 Changing PowerNet password.

### Turning off Encryption:

From shell run cpmttool with arguments:  
**cpntool -cryptoff**  
and choose device from list. All process is displayed on Fig.2.

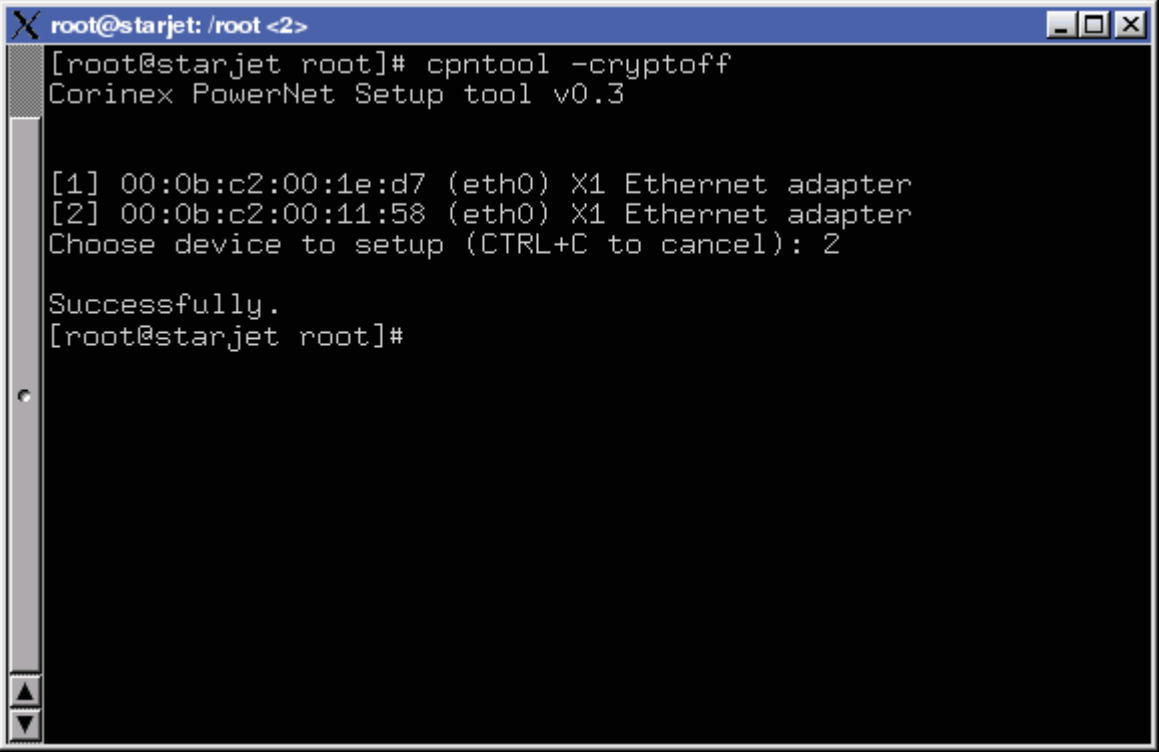


Fig.2 Turning Encryption off.

### Displaying network statistics:

From shell run cpmttool with arguments:  
**cpntool -netstat**  
Conection quality will be displayed (from selected device to other powerline connected devices).

**Note:** PowerNet adapter keeps Network statistics history sothat can happend that listed devices can be currently unreachable . All process is displayed on Fig.3.

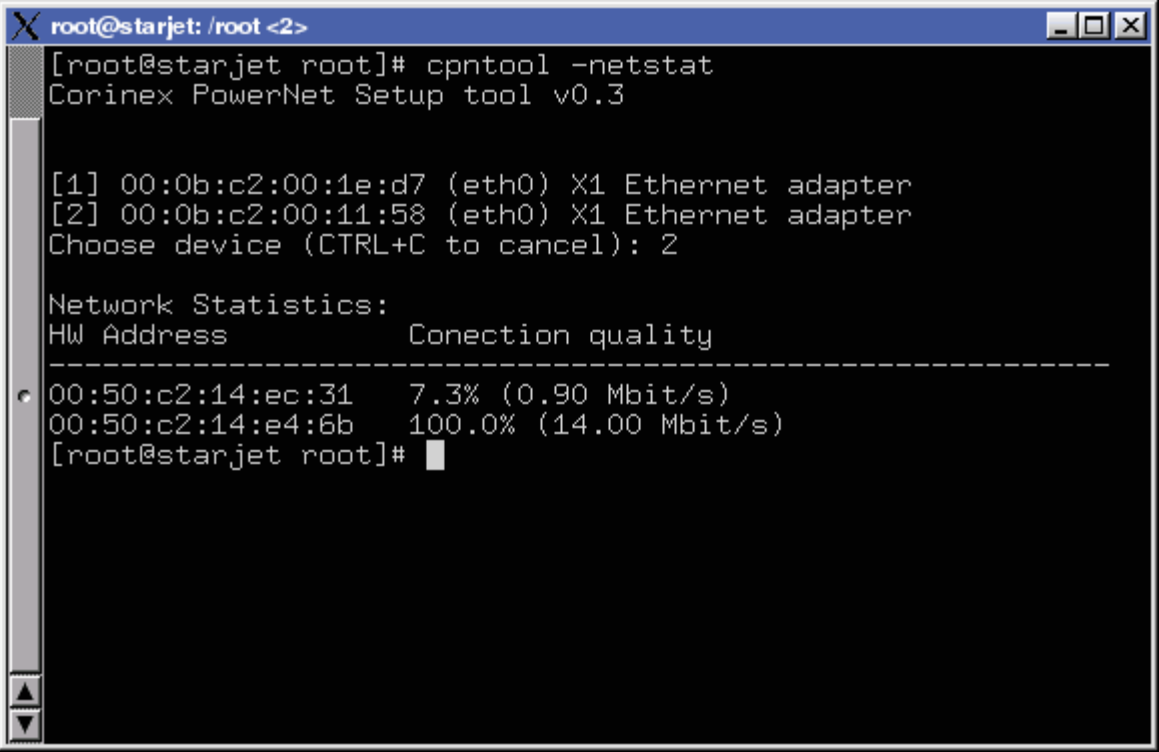


Fig.3 Displaying Adapter Network Statistics.